


This system is composed of 2 transmitters, A and B, in which 1 is ON and is connected to the antenna and the second is OFF and is connected to the dummy load. In case the operating transmitter fails, **it is immediately replaced with the second unit**.

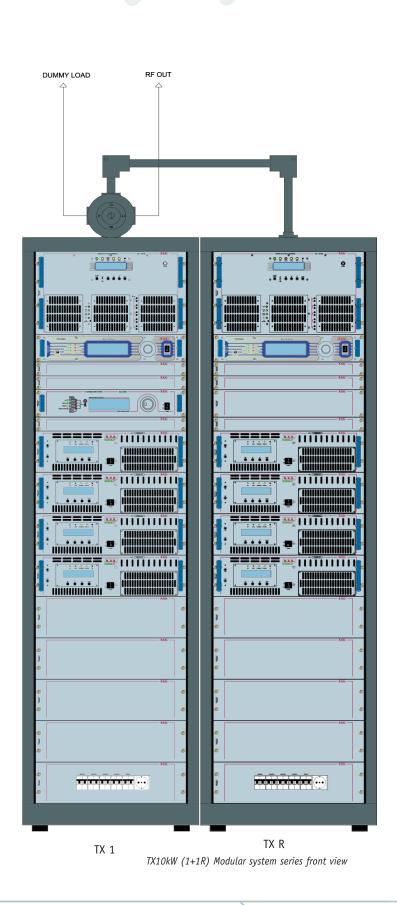



Via del Fonditore, 2/2c Zona Industriale Roveri 40138 Bologna Italy Phone +39 0516010506 Fax +39 0516011104 sales@R VR.it - www.RVR.it RIR (

1